
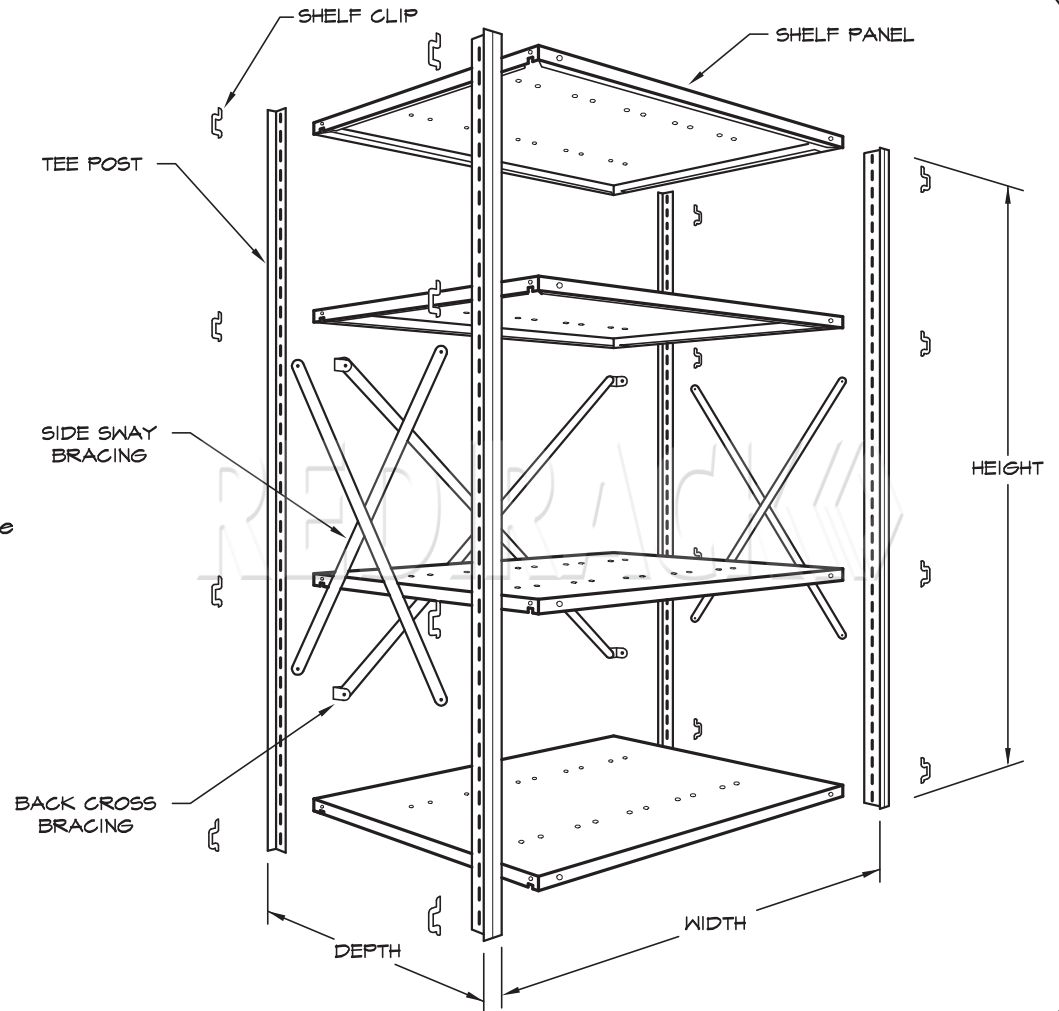


INSTALLATION PROCEDURES FOR INTER LOK

NO-BOLT SHELVING SYSTEM

1. Position shelf clips in T-section uprights at desired shelf levels.
2. Hold first post vertically in required location with the unpunched side of the post facing out.
3. Place one intermediate shelf in first bay and clip in other posts.
4. Clip in top and bottom shelves so that unit is self standing, top of bottom shelf located 4" from floor.
5. Position and bolt back and side sway bracing in unit, do not tighten bolts.
6. Proceed to next bay and repeat procedure.
7. Position and bolt balance of sway bracing in locations shown on floor plan, position at approximately mid-height of unit but move to suit shelf levels.
8. Square-up units and tighten sway bracing.
9. Fill in intermediate shelves.
10. Back to back runs require tie clips on two levels.

BOLTLESS CLIP & SHELF PANEL SEATING DETAIL

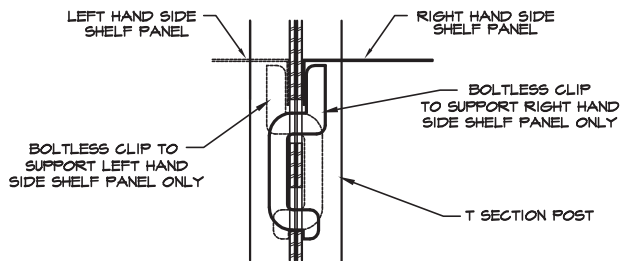

INSTALLATION PROCEDURES

NO.	DATE	DR.	REVISIONS	APP.

CUSTOMER APPROVAL

Initial.....

Date.....

REDIRACK
WAREHOUSE SOLUTIONS

DR. *78*

APP.

DATE
02-04-94

SCALE
AS SHOWN

No. *EC*

94064

B